

## JP704M1 PART LIST



序号 Item.	物料代码 Material code	图片 Picture	方向 Direction	名称 Name
1	JP704.3-6		L/R	安装座 Installation base
2	JP704.3-7		L/R	704连接块 Connection block
3	JP704.3-8		L/R	导轨安装板 Guide board
4	JP704.3-11		L/R	704M1-02电机座 Motor base
5	JP704.3-2			704M1-02切片连杆A Cutting rod A
6	JP704.3-3			704M1-02拨片连杆A Sending rod A
7	JP704.3-4			704M1-02拨片连杆B Cutting rod B
8	JP704.2-7		L/R	704拨叉挡块 Block
9	SJPX1.6-12			连接螺钉销 Pin

10	SX903-21			定位条 Stripe
11	SX901B-04			气缸座 Air cylinder base
12	2JP101.1-1			2JP101调节支撑板(M4) M4 adjustable support Length: 14mm width:12mm
13	SJPX1.1-4			调节块上张紧块 Tension block for upper block length:25mm
14	2JP101.1-8			调节块上 Upper block
15	2JP101.1-6			2JP101调节块(M4) 2JP101 Block(M4)
16	2JP101.1-4			调节螺丝(M4) Adjusting screw (M4)
17	4JP403.1-2			4JP403气缸连接块 4JP403 Connection block
18	JPX6-10			转动销 Roller pin

19	SX9-14		L/R	挂钩 Stopper
20	JP704.1-10			5mm轴承销 Pin
21	JP704.1-21			704M1动刀复位座 Movable block
22	JP704.3-9		L/R	704M1-02摆杆复位簧 Shift return spring
23	JPX4.4-12			704M1-01动刀轴 Shaft
24	JP507M-16		L/R	JP507M动刀（钨钢） JP507M cutter
25	SJPX1.6-13			挡圈 Ring
26	JP506B-5			506B拨叉连接销 Fork pin
27	SJPX1.4-29B			进给轮轴（加长） Shaft (long)

28	SJPX1.4-40			动刀复位簧 Return spring for cutter
29	SX-41			张紧弹簧 Tension spring
30	SX-41			固定杆扭簧 Torsional spring
31	SJPX301-11			拨叉摆杆挡圈 Fokr rod ring
32	JP506B-2			JP506B 定刀 JP506B Bottom knife
33	JP506B-4			JP506B拨叉摆杆 JP506B Swing level
34	JP506B-7			JP506B导片板 (2-9/3-5/4-7) Sequin guide
35	JP506B-14			JP506B定位板 JP506 fixed pin
36	JP506B-20			JP506B定位板扭簧 506B return spring

37				Motor:42H053H-2004-007
38				气缸: 16x60 Cylinder 16x60
39				调节阀 Valve
40				杆端关节轴承 SI3P/K Rod end bearing
41				双头螺柱M3X40 Screwed rod:M3X40
42				Guide:25/84
43	2JP101M-04			2JP101M连杆A 2JP101M Rod A
44	2JP101M-05			2JP101M连杆B 2JP101M Rod B
45	2JP101M-06B			2JP101M连杆销 Rod Pin B

46	SJPX1.4-35			<p>过片弹簧圈 Spring</p>
47	SJPX1.4-17			<p>电机垫圈 Motor washer</p>